

MY22 Silverado HD

Australia and New Zealand

Owner's Manual Supplement
Roadside Assistance
Service and Warranty

Part No. 95711953
www.gmspecialtyvehicles.com



Vehicle identification certificate

Owner’s name

Owner’s address

Town	State	Postcode
------	-------	----------

Vehicle Identification Number (17 character ISOVIN)

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Model name

Registration number	Engine number
---------------------	---------------

Odometer reading

Selling dealer’s stamp and signature

General Motors Australia and New Zealand Pty Ltd, ABN 84 006 893 232,
General Motors New Zealand Limited, NZBN 9429040971896
(both trading as GM Speciality Vehicles or GMSV)

Change of name, address or ownership

If you have moved house, changed your details or purchased a pre-owned GMSV we'd like to hear from you!
GMSV uses your details to keep your vehicle's factory provided Roadside Assistance and Warranty details up to date.
It also helps us notify you of any outstanding rework action on your vehicle.

To update your details, please contact GMSV via email **gmsvcare@gm.com** or via phone on the following toll-free numbers:

Australia: **1800 00 GMSV (4678)**

New Zealand: **0800 GMSV00 (467800)**

GMSV is collecting the new owner's personal information in order to process the request for transfer for the specified vehicle. We may disclose your personal information to our related companies and third parties who provide us with (or help us provide) products and services, including to overseas locations such as the USA, and other countries in Europe, Oceania and Asia. GMSV's privacy policy is available at www.gmspecialtyvehicles.com/privacypolicy

Printed in Australia

Part No. 95711953

Jan. 2022 (MY22 Silverado HD. Print 1)

© 2022 General Motors. Reproduction in whole or part is prohibited without written approval from
General Motors Australia and New Zealand Pty Ltd, ABN 84 006 893 232 (Australia) or
General Motors New Zealand Limited, NZBN 9429040971896 (New Zealand)

2

Notes

Notes

Introduction.....	4
Seats, Restraints	9
Instruments and Controls	24
Lighting	26
Infotainment System.....	28
Driving and Operating.....	29
Vehicle Care	30
Technical Data	41
Service and Warranty	48
Customer Information	101
Index.....	103

Introduction



Congratulations on the purchase of your new Chevrolet Silverado

Your Chevrolet Silverado is a century of truck building know-how with over 11 million kilometres of testing, it is a truck that offers you more power and technology so you can get the job done; one that's built on the legacy of some of the most capable full-size pickups on the road.

Thank you for choosing GM Specialty Vehicles (GMSV). From this moment on, you are now part of a very special club and our valued customer. GMSV is dedicated to ensuring a safe and enjoyable journey for all owners who have the convenience of a nationwide network of dealerships, all of which subscribe to globally recognised GM standards of excellence.

This supplement applies to the current Australian and New Zealand delivered Chevrolet Silverado HD vehicles. Due to different models and options, you may find reference to some equipment not fitted to your own vehicle.

Please note that all information, illustrations and specifications in this Owner's Manual are based on the latest production information available at the time of printing. GMSV reserves the right to make changes at any time without notice and without incurring any obligation.

Introduction

This Owner's Manual Supplement is an addition to the Chevrolet Silverado 2500HD/3500HD Owner's Manual and the 6.6L Duramax Diesel Engine Supplement also supplied with your vehicle.

It should be read in conjunction with the other manuals to provide you with all the necessary information to enable you to drive your vehicle safely and efficiently.

Make sure your passengers are aware of the possible risk of accident and injury which may result from improper use of the vehicle.

Using this Manual

- Where information in this Owner's Manual Supplement and the Chevrolet Owner's Manuals differ, this Supplement should be preferred.

Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant.

- The table of contents at the beginning of this manual and within each chapter shows where the information is located.
- The index will enable you to search for specific information.
- Directional data, e.g. left or right, or front or back, always relate to the direction of travel.

Symbols and References

Page references indicated with ⇨ indicates 'see page' in this Supplement.

References indicated with ⇨ *OM* indicates 'see section' in the Chevrolet Silverado 2500HD/3500HD Owner's Manual.

References indicated with ⇨ *DM* indicates 'see section' in the 6.6L Duramax Diesel Engine Supplement.

Danger, Warnings and Cautions

Danger

Text marked  **Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

Warning


Text marked  **Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

Caution

Text marked **Caution** provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.

6 Introduction

Instrument Panel Overview

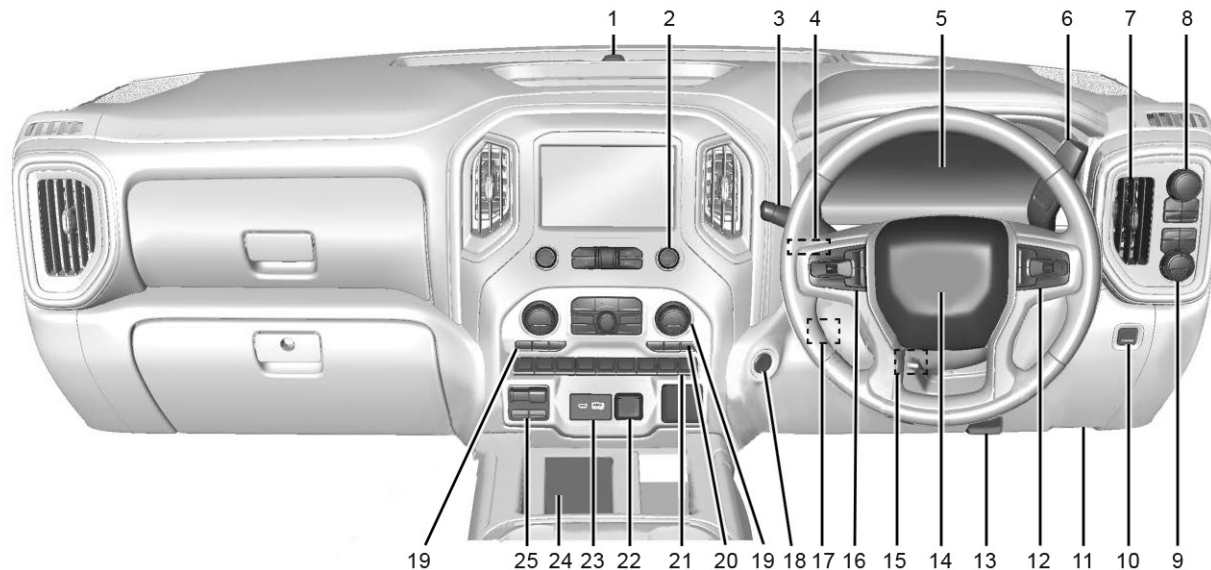

1. Light Sensor. *See Automatic Headlamp System* ⇨ *OM Lighting*.
2. Infotainment Controls. *See Infotainment System* ⇨ 28.
3. Turn Signal Lever. *See Turn and Lane-Change Signals* ⇨ *OM Lighting*.
Windshield Wiper/Washer ⇨ *OM Instruments and Controls*.
Headlamp High/Low Beam ⇨ *OM Lighting*.
Intellibeam System ⇨ *OM Lighting*.
4. Head-Up Display (HUD) (If Equipped) (Out of View) ⇨ *OM Instruments and Controls*.
5. Instrument Cluster ⇨ 24.
6. Shift Lever. *See Automatic Transmission* ⇨ *OM Driving and Operating*.
Range Selection Mode. *See Manual Mode* ⇨ *OM Driving and Operating*.
7. Air Vents ⇨ *OM Climate Controls*.
8. Tow/Haul Mode (If Equipped). *See Driver Mode Control* ⇨ *OM Driving and Operating*.
Automatic Transfer Case Control (If Equipped). *See Four Wheel Drive* ⇨ *OM Driving and Operating*.
9. Fog Lamps (If Equipped) ⇨ *OM Lighting*.
Instrument Panel Illumination Control ⇨ *OM Lighting*.
Exterior Cargo Lamps ⇨ *OM Lighting*.
Exterior Lamp Controls ⇨ *OM Lighting*.
Task Lighting (Disabled). *See Exterior Lighting* ⇨ 26.
10. Electric Park Brake ⇨ *OM Driving and Operating*.
11. Data Link Connector (DLC) (Out of View). *See Malfunction Indicator Lamp (Check Engine Light)* ⇨ *OM Instruments and Controls*.
12. Steering Wheel Controls ⇨ *OM Instruments and Controls*.
Driver Information Centre (DIC) Controls ⇨ *OM Instruments and Controls*.
13. Bonnet Release. *See Hood* ⇨ *OM Vehicle Care*.
14. Horn ⇨ *OM Instruments and Controls*.
15. Steering Wheel Adjustment (Out of View) ⇨ *OM Instruments and Controls*.
16. Cruise Control ⇨ *OM Driving and Operating*.
Forward Collision Alert (FCA) System (If Equipped) ⇨ *OM Driving and Operating*.
Heated Steering Wheel (If Equipped) ⇨ *OM Instruments and Controls*.
17. Headlight Levelling Switch (Out of View). *See Controls* ⇨ 25.
18. ENGINE START/STOP Button. *See Starting and Operating* ⇨ *OM Driving and Operating*.
19. Dual Automatic Climate Control System (If Equipped) ⇨ *OM Climate Controls*.
20. Heated and Ventilated Front Seats (If Equipped) ⇨ *OM Seats and Restraints*.
21.  Exhaust Brake. ⇨ *DM Driving and Operating*.
 Lane Departure Warning (LDW) ⇨ *OM Driving and Operating*.
 Park Assist. *See Assistance Systems for Parking or Backing* ⇨ *OM Driving and Operating*.
 Power Release Tailgate (If Equipped). *See Tailgate* ⇨ *OM Keys, Doors and Windows*.

8 Introduction

 Hazard Warning Flashers ⇨ *OM Lighting*.

 Traction Control/Electronic Stability Control ⇨ *OM Driving and Operating*.

 AC Power Outlet switch (Disabled). See *Power Outlets* ⇨ 25.

 Hill Descent Control ⇨ *OM Driving and Operating*.

22. Power Outlet (Direct Current). See *Power Outlets* ⇨ 25.

23. USB Ports. See *Audio Players* ⇨ *OM*.

24. Wireless Charging (If Equipped) ⇨ *OM Instruments and Controls*.

25. Trailer Brake Control Panel (If Equipped). See “*Integrated Trailer Brake Control System*” under *Towing Equipment* ⇨ *OM Driving and Operating*.

Seats, Restraints

Seat Belts 9

How to Wear Seat Belts Properly	9
Seat Belt Use During Pregnancy	11
Belt Force Limiters	11
Seat Belt Pretensioners	11
Seat Belt Extender	12
Seat Belt Care	12
Replacing Seat Belts after a Crash	12

Airbag System 12

Front Airbag System	13
Side Airbag System	14
Curtain Airbag System	15
What Will You See after an Airbag Inflates?	16
Airbag System Check	16
Replacing Airbag System Parts after a Crash	17

Child Restraints 17

Child Restraint Systems	17
Where to Put the Restraint	18
Child Restraint Installation	19

Seat Belts

How to Wear Seat Belts Properly

Warning

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

(Continued)

10 Seats, Restraints

Warning (Continued)

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid.

Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

Fasten the seat belt before each trip.

The seat belts are locked during heavy vehicle acceleration or deceleration, holding the occupants in the seat. Thereby the risk of injury is considerably reduced.

Periodically check all parts of the seat belt system for damage, soiling and correct functionality. Ensure they draw out smoothly and retract correctly when not in use. Have damaged components replaced immediately.

Note:


Ensure the seat belts are not damaged by sharp-edged objects or trapped in a door, etc. Prevent dirt from getting into the belt retractors.

Seat Belt Reminder


Each seat is equipped with a seat belt reminder, indicated for front seats by  and  in the instrument cluster. See "Warning Lights, Gauges and Indicators" ⇨ *OM Instruments and Controls*.

Fitting

The belt should not be twisted. It should lie flat and fit firmly across your hips.

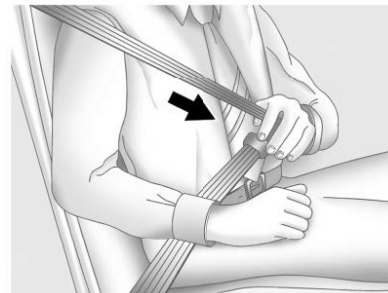

1. Pull the metal tongue across your body.

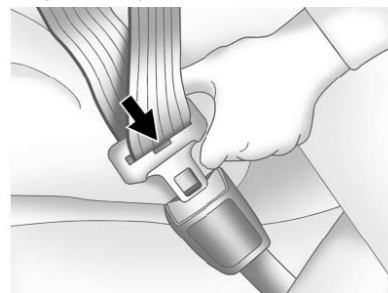

2. Clip it into the buckle.
3. When the metal tongue is locked into place you will hear a click.
4. Give a gentle pull on the buckle to ensure full engagement.
5. Settle the belt at the hip.
6. Run your hand under the sash from hip to shoulder.

The belt should fit comfortably. Any extra belt length retracts automatically.

Note:


For your safety, wear the lap section of the seat belt as low as possible on your hips, not on your waist or abdomen.

The Emergency-locking Retractor belt (ELR) allows you to move while the vehicle is travelling normally, but locks immediately on fast braking, impact with a solid object or any quick movement by the wearer.

In addition, rear seat belts also feature an Automatic Locking Retractor (ALR).

If the shoulder portion of a rear seat belt is pulled out all the way, the locking feature may be engaged.

If this happens, let the belt go back all the way and start again. See *Child Restraint Installation* ⇨ 19.

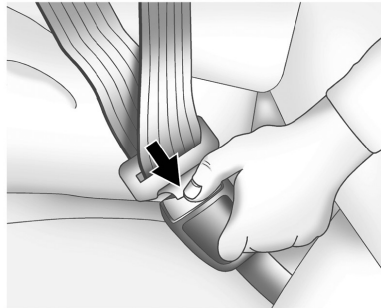Removing

1. Press the release button on the buckle.
2. Allow the belt to retract.
3. Check that it fully retracts without twisting or turning.

Seat Belt Use During Pregnancy

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear a seat belt.

A pregnant woman should wear a three point belt with the lap portion of the belt worn as low as possible below the rounding of their stomach, throughout the pregnancy.

Belt Force Limiters

During a collision, stress on the body is reduced by the gradual release of the belt.

Seat Belt Pretensioners

In the event of a head-on, rear-end or side-on collision of a certain severity, the front outer seat belts are tightened by one pretensioner per seat.

12 Seats, Restraints

Deployment of the belt pretensioners is indicated by continuous illumination of instrument cluster indicator . See “Warning Lights, Gauges and Indicators” ⇨ *OM Instruments and Controls*.

Seat belt pretensioners can only be triggered once and then must be replaced.

Note:

- Do not affix or install accessories or other objects that may interfere with the operation of the belt pretensioners.
- Do not make any modifications to belt pretensioner components.

Seat Belt Extender

The Chevrolet Silverado 2500HD/3500HD Owner's Manual states that seat belt extenders are available from your dealer.

While auto accessory outlets may stock and supply extenders, they are not available from GMSV or dealers in Australia and New Zealand.

Seat Belt Care

Warning

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

Replacing Seat Belts after a Crash

Warning

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

Airbag System

When triggered, airbags inflate within milliseconds. They also deflate so quickly that it is often unnoticeable during the collision.

Warning

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



⚠ Warning

Airbags are part of the Supplemental Restraint System (SRS) as they assist, but do not replace seat belts.

Airbags do not deploy in every accident. Various factors dictate whether they deploy including speed, angle of collision and object hit. Airbags are not designed to inflate if the vehicle is hit from the rear or is involved in a rollover. Seat belts must be worn by all passengers whenever the vehicle is moving.

Airbags inflate with great force.

If you are too close to an inflating airbag it may cause injury.

Seat belts help keep you in position for airbag inflation in the event of a collision.

⚠ Warning

Do not make any modifications to the airbag system.

The driver should sit back as far as possible while still maintaining control of the vehicle. Sitting too close to the airbag can cause death or serious injury when it inflates.

Always wear a seat belt.

Front Airbag System

The front airbag system consists of one airbag in the steering wheel and one in the instrument panel on the passenger's side.

14 Seats, Restraints

These are identified by the word **AIRBAG**.

Warning

The horn pad must not be covered with adhesive or any other material.


The driver should adjust the seat as far rearward as possible while still maintaining control of the vehicle.

Warning

Do not place any objects on or over the instrument panel or between an airbag and yourself.

Do not hang anything from the sun visor or mirror.

Passengers must not rest their feet on the instrument panel.

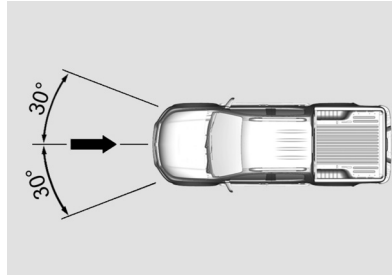

Front airbags will inflate in certain severe frontal or near frontal impacts. Front airbags are not designed to inflate if the vehicle is struck from the side, rear or in rollovers. Always wear a seat belt.

Side Airbag System



Side Impact Airbags (SIAB) are stored in the outer side of the front seats and can be identified by the word **AIRBAG**.


SIAB deploy in most, but not all, severe side impacts. The risk of injury to the upper body and pelvis in the event of a side impact is considerably reduced.

Note:

Because there is limited time available to detect some side impacts, it is not possible to deploy the SIAB in all serious accidents.

A SIAB will deploy in certain severe side impacts. SIAB are not designed to inflate if the vehicle is struck from the front, rear, or in rollovers.

Always wear a seat belt.

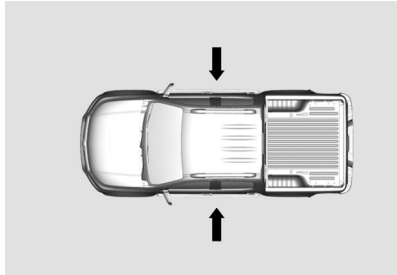

The side airbags deploy in most, but not all severe side impacts.

⚠ Warning

Do not fit any seat covers (except genuine GMSV accessory covers) as they may impair the deployment of the side airbags.

Do not position your body or any object (including pillows) between front seats and doors.

Do not lean on, or sleep against, the door. Always sit centrally in the seat.

Always wear a seat belt.

Curtain Airbag System



Curtain airbags are stored in the roof on each side of the vehicle.

They can be identified by the word AIRBAG on the roof pillars.

The curtain airbags deploy in most, but not all severe side impacts. The risk of injury to the head in the event of a side impact is considerably reduced.

Warning

Do not position your body or any object (including pillows) in the area in which the airbag inflates.

There must be no objects in the area in which the airbag inflates. Refer to the illustration.

Use the hooks above the doors only to hang up light articles of clothing.

Do not place any objects in the pockets of the hanging items.

Do not hold onto the assist grips (above the doors) while seated in the vehicle.

Do not lean on, or sleep against the front or rear doors. Always sit centrally in the seat.

Always wear a seat belt.

What Will You See after an Airbag Inflates?

Airbags inflate and deflate within milliseconds.

Fifteen seconds after any airbag or seat belt pretensioner has been activated (the vehicle has stopped and provided there is battery power), the following will occur:

- The engine will switch off.
- The fuel pump will switch off.
- The hazard lamps will switch on.
- The interior lamp will switch on.
- The doors will unlock.

Switch the ignition off and then on if restarting the engine is required.

Airbag System Check

The  in the instrument cluster illuminates for a few seconds when the ignition is turned on. This indicates the Supplemental Restraint System (SRS) is operational.

Contact a GMSV Dealer immediately:

- If  does not illuminate when the ignition is turned on.
- If  illuminates when driving.
- If the warning 'Airbag Fault' is displayed on the Driver Information Centre (DIC).

In these instances the SRS may not function correctly in the event of an accident.

Replacing Airbag System Parts after a Crash

Note:

After an accident where the SRS has deployed, the systems, associated parts and hardware must be checked and replaced as required.

Seats, associated parts and hardware must also be checked and replaced as required.

The SRS should also be inspected after an accident if:

- The instrument panel area or steering wheel is scratched, cracked or damaged.
- The front seats and upholstery are damaged.
- The headliner or trim panels are damaged.

It is recommended that this work be carried out by a GMSV Dealer or approved repairer.

Child Restraints

Child Restraint Systems

⚠ Warning

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



⚠ Warning

This manual provides you with general information concerning child restraints only.

The driver is required by law to ensure that passengers and pets are suitably restrained. In most States and Territories of Australia, and in New Zealand, specific laws may exist which require children to be seated in approved child restraints and/or in certain locations within the vehicle.

GMSV strongly recommends that you refer to your specific State or Territory regulations to determine which child restraint and seat location is suitable for your child.

18 Seats, Restraints

Warning

Always ensure that the seat belt fits firmly around the child restraint, as applicable to the type of restraint used.

If a child cannot see out of the window, do not raise him/her by means of an ordinary cushion. It will not stay in place in a collision and the child can slip out of the straps and become entangled.

Always follow the child restraint manufacturer's fitting instructions when installing a child restraint into the vehicle.

Note:

Refer to the relevant legislation, an approved child restraint fitting station or capsule manufacturer's information for the recommended type of child restraint to use.

Where to Put the Restraint

Warning

It is safest for children to be seated in the rear seat.

Only child restraints that have clips to attach to the vehicle's anchorage fitting (as shown in the following illustrations) are to be used. Earlier types of child restraints may not attach securely to this type of anchor.

Use only Standards Australia and New Zealand approved child restraints and harnesses. Only purchase a child restraint which carries the appropriate Standards Australia sticker of approval.

Australian States and Territories and New Zealand have laws restricting the seating of children in the front passenger seat.

(Continued)

Warning (Continued)

In most jurisdictions, children under 4 years should not be seated in the front passenger seat. Check your local road safety regulations before seating a child in the front seat.

Where legally allowable, you may install a forward-facing child restraint in the front seat, but always move the passenger seat as far back as it will go.

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints.

Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Child Restraint Installation

The vehicle has been designed to accommodate child restraints on the rear seat.

When using a child restraint, read the installation instructions supplied with the child restraint and follow the directions for fitment carefully.

The child restraint system should be secured in conjunction with the vehicle's seat belt.

Secure the child in the restraint in accordance with the manufacturer's instructions.

Further information is also provided in the Chevrolet Silverado 2500HD/3500HD Owner's Manual.

Note:

If unsure about installing a child restraint, contact a GMSV Dealer or an approved restraint fitting station.

Older Children




A child should use a normal three point seat belt only when:

- They can sit against the back of the rear seat with knees bent comfortably at the edge of the seat.
- The lap belt rests low and snug across the hips, not across the stomach.
- The sash belt is centred on the shoulder and chest.
- They are able to stay seated like this for the entire trip.

Infants and Young Children


Infants

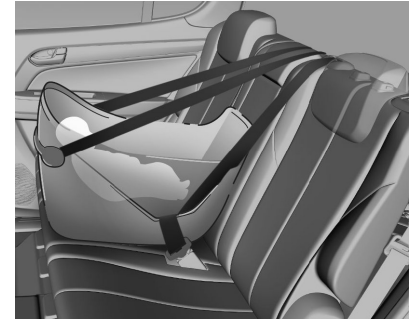

Rearward facing infant capsules are designed so that in the event of a collision, impact forces will be evenly spread over the baby's back, with minimal jarring to the vulnerable head and neck area.


20 Seats, Restraints

Young Children

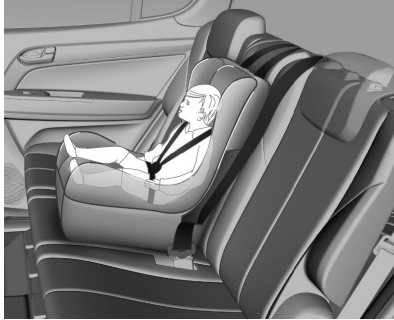

Forward facing child seats are for use when the child is able to sit and easily hold their head upright.

Booster Seats

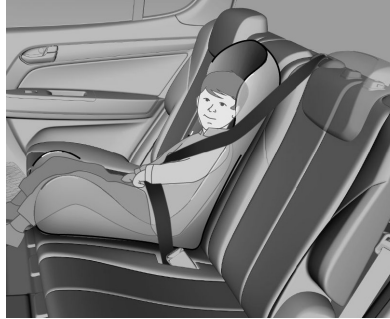

Booster seats are for when children outgrow a typical forward facing child seat, but are still too small for three point seat belts.

Automatic Locking Retractor (ALR) Seat Belts

ALR seat belts are provided at the rear seating positions. Use these in conjunction with a top tether strap when a non-ISOFIX child seat is being used.

Extend the seat belt fully and then fit the belt around the applicable locations on the child restraint and fasten the buckle. Refer to the installation instructions supplied with the child restraint.


Allow the belt to retract. While the belt is retracting, a clicking noise can be heard which indicates the ALR mechanism is functioning. The seat belt is then locked and cannot be extended until fully retracted, enabling the belt to be fitted securely to the child restraint.

To release the locking mechanism, undo the buckle and allow the seat belt to fully retract. It will then function as a normal Emergency Locking Retractor (ELR) seat belt.

ISOFIX Child Restraint Systems

Note:

All references to the LATCH system in the Chevrolet Silverado 2500HD/3500HD Owner's Manual relate to the ISOFIX system in Australian Standards.

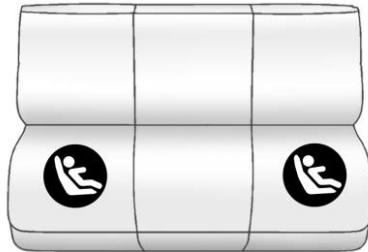

ISOFIX mounting locations are marked by a  on the rear seat back.


Open the cover and fasten the vehicle-approved ISOFIX child restraint to the ISOFIX mounting brackets.

Note:

Ensure the seat belt buckles are placed out of the way of the child seat.

In addition to the ISOFIX mounting brackets, fasten the top-tether strap to the top-tether anchor points.

Top Tether Anchor Fittings

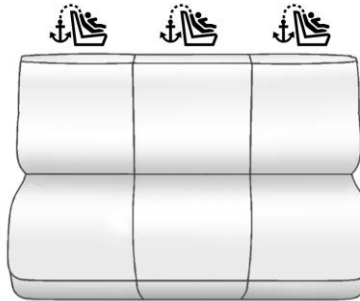


Top tether anchors are located on the top of the rear seat backs.

Do not attach anything other than a child restraint system to the vehicle's top tether anchors.

Loops are provided to assist routing the top tether anchor strap. Ensure the top tether is correctly routed.

Install the top tethers as follows.

1. Install the child restraint by following the restraint manufacturer's instructions.

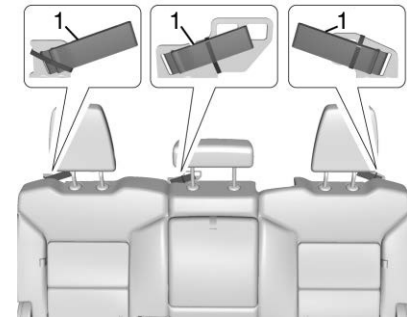


2. For first time use, remove and discard the rubber band from the top tether loop (1).

22 Seats, Restraints

3. Connect the top tether as follows:

- For the left position:

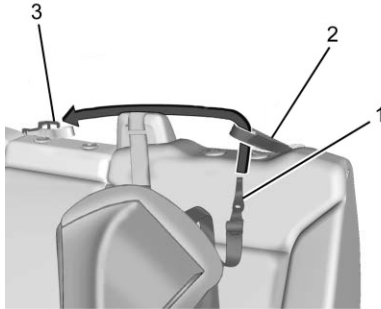


HINT:

Removal of the centre and left rear head restraints may make installation easier.

- a. Route the top tether (1) through the left loop (2).
- b. Attach the tether to the left side of the centre metal top tether anchor (3).

- For the centre position:

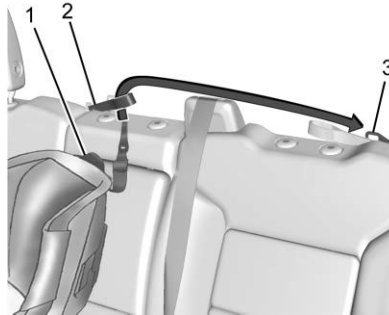


HINT:

Removal of the centre and left rear head restraints may make installation easier.

- a. Route the top tether (1) through the centre loop (2).
- b. Attach the tether to the left metal top tether anchor (3).


- For the right position:

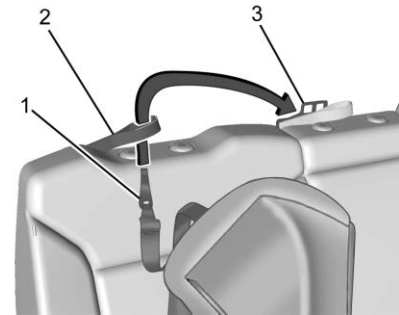

HINT:

Removal of the centre and right rear head restraints may make installation easier.

- a. Route the top tether (1) through the right loop (2).
- b. Attach the tether to the right side of the centre metal top tether anchor (3).

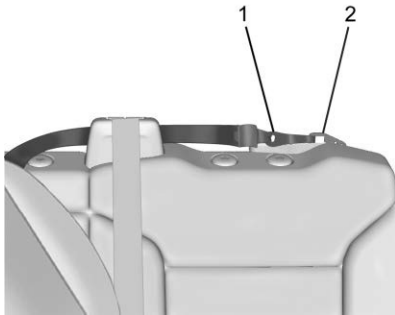


4. Make sure the child restraint top tether hook (1) is completely closed and secured to the metal top tether anchor (2).
5. Tighten the top tether as-per the child restraint manufacturer's instructions.
6. When the top tether is properly tightened, the loop may bend. This is normal and will not damage the vehicle.
7. If child restraints are installed in both outboard positions, both top tethers can be attached to the centre metal anchor.
8. Top tethers can be attached for child restraints in all three rear seating positions at the same time, following the routing instructions above.

Instruments and Controls

Instrument Cluster.....	24
Controls.....	25
Headlamp Levelling.....	25
Power Outlets	25

Instrument Cluster

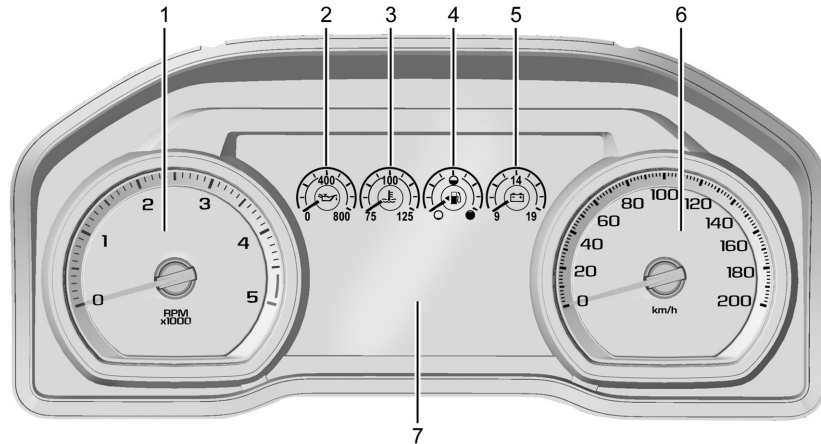

1. *Tachometer*
2. *Engine Oil Pressure Gauge*
3. *Engine Coolant Temperature Gauge*
4. *Fuel Gauge*
5. *Voltmeter Gauge*

6. *Speedometer*
7. *Driver Information Centre (DIC)*

For further information
⇨ *OM Instruments and Controls.*

Controls

Headlamp Levelling



The vehicle is fitted with a manual headlamp levelling system. This system is designed to allow for adjustment of headlamp beam height to compensate for varying loads.

The dial switch is located on the instrument panel to the LH side of the steering column.

When the vehicle is loaded and the headlamp alignment appears to be too high, the dial switch can be operated to lower the alignment of the headlamps to prevent interference with oncoming traffic and provide the best illumination of the road ahead of the vehicle.

Turn  to the desired position.

0 : No load

1 : Light load

2 : Medium load

3 : Heavy load

Power Outlets

While the vehicle is fitted with several 12 volt DC power outlets, the Chevrolet Silverado 2500HD/3500HD Owner's Manual describes two AC 110 / 120 volt outlets; one in the tray and one on the instrument panel.

As these are not compatible with 240 volt devices they have been disabled.

For further information see "Power Outlets" ⇨ *OM Instruments and Controls*.

Lighting

Exterior Lighting.....	26
Front Fog Lamps	26
Marker Lamps	26
Side Turn Signal Lamps	27
Exterior Cargo Lamps	27
Task Lighting	27

Exterior Lighting

Front Fog Lamps




Front fog lamps are not operational in this vehicle. While the button may appear, the front fog lamps are not functional.

Marker Lamps



Marker lamps are provided on each exterior mirror. These illuminate automatically when the exterior lamp switch is in the AUTO, Park or On positions.

Side Turn Signal Lamps

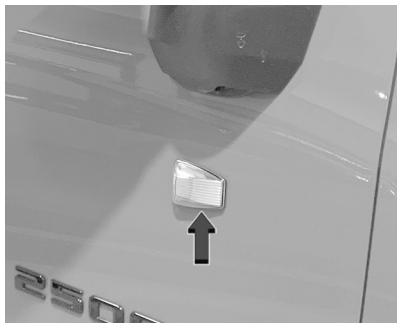

Side turn signal lamps are provided on each front door. The lamps in each exterior mirror are not functional.

Exterior Cargo Lamps



The exterior cargo lamp button will only operate the cargo bed lamps and not the high mount or tailgate handle lamps.

Task Lighting



Task lamps are not operational in this vehicle. While the button may appear, the task lamps are not functional.

Infotainment System

General Information 28

Radio and OnStar System 28

Navigation 28

General Information

The vehicle is equipped with an AM/FM radio with Bluetooth connectivity. It also supports Apple CarPlay and Android Auto via Wired, or if equipped, Wireless Phone Projection.

For operation and description of the infotainment system, refer to the Chevrolet Silverado 2500HD/3500HD Owner's Manual provided with the vehicle noting the following.

Radio and OnStar System

HD radio technology and satellite radio, along with the OnStar system are not available in Australia and New Zealand.

While the buttons and menu items may appear, the features are not operational.

Navigation

Satellite navigation is available using a compatible mobile phone and Apple CarPlay or Android Auto.

To use this feature, connect the phone via Wired or, if equipped, Wireless Phone Projection.

For further information see "Apple CarPlay and Android Auto" ⇨ *OM Phone*.

Driving and Operating

Fuel	29
Fuel For Diesel Engines.....	29
Diesel Exhaust Fluid	29
Trailer Towing	29
Trailer Wiring Harness.....	29

Fuel

Fuel For Diesel Engines

The selection of a high-quality fuel is important for maintaining optimum vehicle performance.

Diesel fuel should meet or exceed the minimum requirements of the local fuel standards.

Do not use fuel with more than 15 ppm sulphur, commonly referred to as Ultra Low Sulphur Fuel.

Do not use a diesel blend containing more than 20% biodiesel by volume.

For further information see “Fuel” ⇨ *DM Driving and Operating*.

Diesel Exhaust Fluid

Diesel exhaust fluid, commonly known as AdBlue, is used in the diesel engine in this vehicle to reduce the amount of emissions.

For further information see “Diesel Exhaust Fluid” ⇨ *DM Driving and Operating*.

Trailer Towing

This vehicle is approved for a conventional style towing hitch. All other types (5th axle, etc.) will require 3rd party engineering.

For towing specifications, see *Trailer Towing* ⇨ 45.

Trailer Wiring Harness

The vehicle is equipped with a trailer wiring harness. Included is a 12 pin flat connector wired to standard configuration. See *Trailer Plug Information* ⇨ 37.

Vehicle Care

Engine Compartment

Overview..... 31

Bulb Replacement 32

Rear Turn Signal Lamp 32

Electrical System..... 33

Instrument Panel Fuse

Block (Right)..... 33

Instrument Panel Fuse

Block (Left) 34

Trailer Plug Information 37

Plug Illustration and Pin

Orientation..... 37

Pin Description 37

12 Pin Trailer Plug

Functionality Table..... 39


Wheels and Tyres 40

Tyre Changing..... 40

Tyre Placard 40

Engine Drive Belt Routing ... 40

Engine Compartment Overview

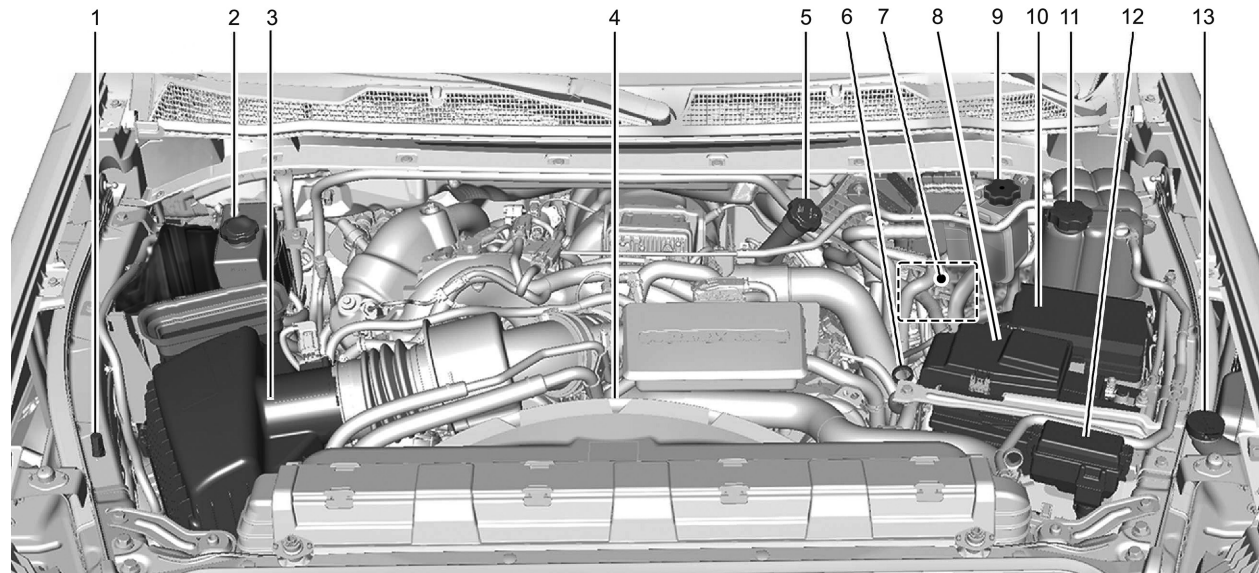


32 Vehicle Care

Note: Although the location of some components differs for Australian vehicles, for details of all engine compartment components see the Chevrolet Silverado 2500HD/3500HD Owner's Manual (OM) or 6.6L Duramax Diesel Engine Supplement (DM).

1. Remote Negative (–) Terminal. See “Jump Starting - North America” OM ⇨ Vehicle Care
2. Brake Fluid Reservoir. See “Brake Fluid” OM ⇨ Vehicle Care
3. Engine Air Cleaner/Filter. See “Engine Air Cleaner/Filter” DM ⇨ Vehicle Care
4. Engine Cooling Fans (Out of View). See “Engine Fan” DM ⇨ Vehicle Care
5. Engine Oil Fill Cap. See “When to Add Engine Oil” under “Engine Oil” DM ⇨ Vehicle Care
6. Engine Oil Dipstick. See “Checking Engine Oil” under “Engine Oil” DM ⇨ Vehicle Care
7. Auxiliary Battery (Out of View). See “Auxiliary Battery” under “Towing Equipment” OM ⇨ Driving and Operating
8. Positive (+) Terminal (Under Cover). See “Jump Starting - North America” OM ⇨ Vehicle Care
Battery. See “Battery - North America” OM ⇨ Vehicle Care
9. Low Temperature Cooling Circuit Coolant Reservoir. See “Cooling System (Low Temperature Cooling Circuit)” DM ⇨ Vehicle Care
10. Engine Compartment Fuse Block. See “Engine Compartment Fuse Block” OM ⇨ Vehicle Care
11. Engine Coolant Surge Tank. See “Cooling System (Engine)” DM ⇨ Vehicle Care
12. Auxiliary Fuse Block. See “Engine Compartment Fuse Block” DM ⇨ Vehicle Care.
13. Windshield Washer Fluid Reservoir. See “Adding Washer Fluid” under “Washer Fluid” See “Cooling System (Engine)” OM ⇨ Vehicle Care

Bulb Replacement

Rear Turn Signal Lamp

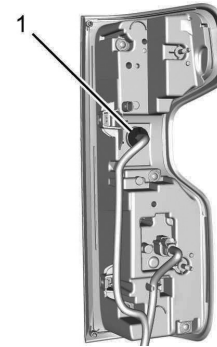


Turn signal lamp (1) – 16W Amber
Rear turn signal lamps are fitted in the position used for back-up lamps on US vehicles. See “Bulb Replacement” ⇨ OM Vehicle Care.

Note:

Reverse (back-up) lamps are fitted to the lower rear bumper. They contain LEDs and are not serviceable.


Electrical System

Instrument Panel Fuse Block (Right)

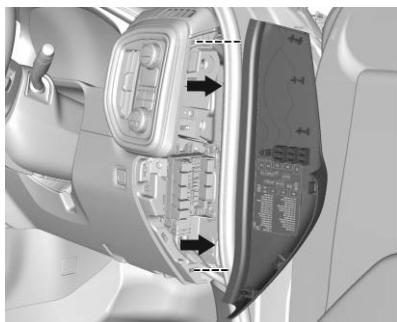

The right instrument panel fuse block access cover is on the driver side edge of the instrument panel.

Pull the cover in the direction shown to access the fuse block.

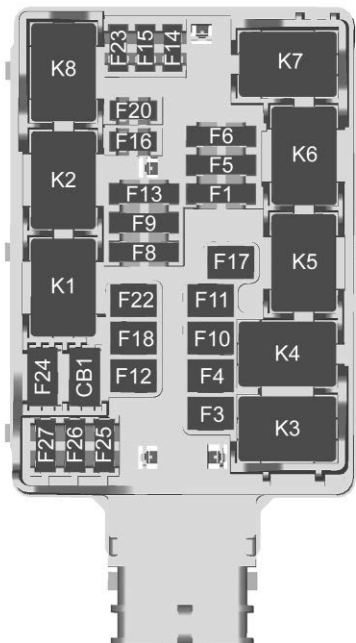

Note:

The vehicle may not be equipped with all of the fuses shown.

Fuses	Circuit
F1	Rear heated seats left/right
F3	—
F4	—
F5	Spare/MFEG
F6	Heated and ventilated seats left/right
F8	—
F9	Passive entry-Passive start/Spare
F10	—
F11	—
F12	Passenger power seat
F13	Export power take off/Special equipment
F14	—
F15	—
F16	AMP
F17	—
F18	—
F20	Endgate
F22	Rear sliding window
F23	—

34 Vehicle Care

Fuses	Circuit
-------	---------

F24	—
F25	—
F26	—
F27	—


Circuit Breakers	Circuit
------------------	---------

CB1	—
-----	---

Relay	Circuit
-------	---------

K1	Rear sliding window open
K2	Rear sliding window close
K3	MFEG major 1
K4	MFEG minor 1
K5	MFEG minor 2
K6	MFEG major 2
K7	—
K8	—


Instrument Panel Fuse Block (Left)

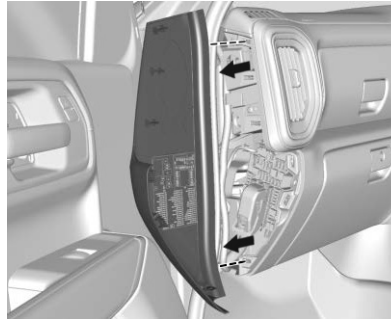

The left instrument panel fuse block access cover is on the passenger side edge of the instrument panel.

Pull the cover in the direction shown to access the front of the fuse block.


A fuse puller and spare fuses are available in the cover.

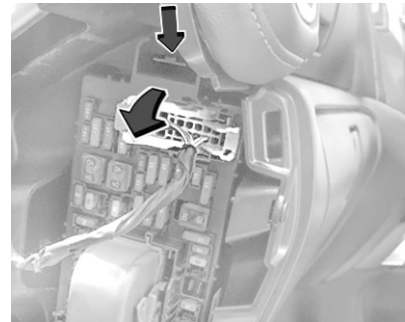


To access the back of the fuse block:

1. Push the locking tab at the top of the fuse block down.
2. Pull the top of the fuse block outward.
3. To reinstall, ensure the locating tab at the bottom of the fuse block is correctly engaged and push the top of the fuseblock inward.
4. Ensure the locking tab at the top of the fuse block is engaged.

Front

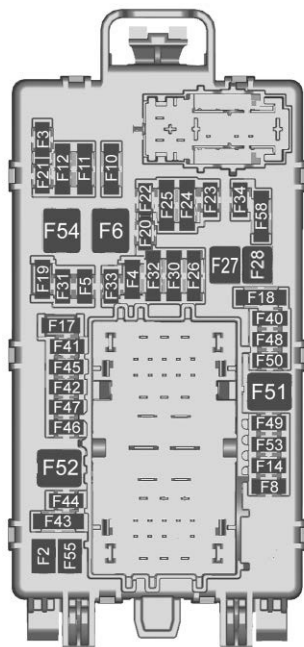

Back

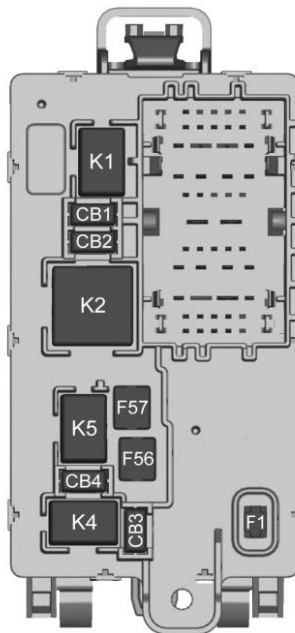**Note:**

The vehicle may not be equipped with all of the fuses shown.

Fuses**Circuit**

F1	Right doors
F2	Left doors
F3	Universal remote system
F4	—
F5	—
F6	Front blower
F8	Lumbar switch
F10	Body control module 6/ Body control module 7
F11	Seat/CLM
F12	Body control module 3/ Body control module 5
F14	Mirrors/Windows module
F17	Steering wheel controls
F18	VPM/OBS/ DET
F19	DLIS
F20	Ventilated seats
F21	NOT R/C
F22	Heated steering wheel
F23	MISC R/C
F24	Instrument panel cluster ignition/Overhead

36 Vehicle Care

Fuses	Circuit
F25	Heating, ventilation, and air conditioning ignition/ Heating, ventilation, and air conditioning auxiliary
F26	USB ports/Special equipment option retained accessory power
F27	Accessory power outlet/ Retained accessory power
F28	Accessory power outlet/ Battery
F30	Sensing and diagnostic module/Parking brake
F31	Body control module 4
F32	Special equipment option/ Data link connection
F33	Body control module 8
F34	Cargo lamp
F40	CGM
F41	Infotainment 1
F42	TCP

Fuses	Circuit
F43	–
F44	AVM
F45	Body control module 2
F46	Heating, ventilation, and air conditioning/Battery 1
F47	Instrument panel cluster/ Battery
F48	Transmission control module
F49	Body control module 1
F50	–
F51	Battery 1
F52	Battery 2
F53	–
F54	Sunroof
F55	Driver power seat
F56	DC DC TRANS 1
F57	DC DC TRANS 2
F58	Infotainment 2


Circuit Breakers	Circuit
CB1	Accessory power outlet 2
CB2	Accessory power outlet 1/Cigarette Lighter
CB3	Accessory power outlet 3
CB4	Accessory power outlet 4
Relay	Circuit
K1	Run/Crank
K2	Retained accessory power/Accessory 1
K4	Retained accessory power/Accessory 2
K5	–

Trailer Plug Information

The vehicle is fitted with a 12 pin trailer plug to meet local requirements. Each pin has specific functionality and current carrying capability. See the following for pin orientation, name, function, and maximum load restrictions.

Maximum load restrictions on trailer pins must be adhered to or circuit and component failure will occur.

Plug Illustration and Pin Orientation

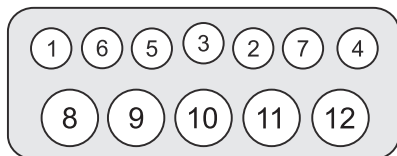

View of 12 pin circuits when opening dust proof cover

Pin Description

1. Left Indicator

This pin carries the left indicator signal. The signal will activate when the vehicle left indicator is active.

The maximum incandescent globes the trailer can have connected to this pin is 2 x 21W globes.

2. Reverse

This pin carries the reverse lamp signal. The signal will activate when the vehicle reverse lamp is active.

The maximum incandescent globes the trailer can have connected to this pin is 2 x 21W globes.

3. Ground

This pin is the light-duty ground pin. It is to be used as the ground return for all the lights and electric brakes on the trailer.

The maximum current on this pin is 15 amps as a ground return.

4. Right Indicator

This pin carries the right indicator signal. The signal will activate when the vehicle right indicator is active.

The maximum incandescent globes the trailer can have connected to this pin is 2 x 21W globes.

5. Electric Brake

This pin carries the electric brake control signal. If you require further information regarding the operation of the electric brake control, contact your dealer.

The maximum load on this pin is 4 x electric brake hubs.

6. Brake Lamp

This pin carries the brake lamp signal.

The signal will activate when the vehicle brake lamp is active.

38 Vehicle Care

The maximum incandescent globes the trailer can have connected to this pin is 2 x 21W globes.

7. Park Lamp

This pin carries the park lamp Signal. The signal will activate when the vehicle park lamp is active.

The maximum incandescent globes the trailer can have connected to this pin is 16 x 5W globes.

8. Battery +

This carries the medium-duty battery positive supply and can be used for medium-duty accessories such as fridges, etc.

The maximum current on this pin is 20 amp.

Note: This pin is not to be used to charge the battery of the trailer. A separate heavy-duty connector is required for trailer battery charging.

9. Not Connected

There is no circuit connected to this pin.

10. Ground

This carries the medium-duty ground supply. The ground supply can be used for medium-duty accessories such as fridges, etc.

The maximum current on this pin is 20 amp as a ground return.

Note: This pin is not to be used to charge the battery of the trailer, a separate Heavy-Duty connector is required for trailer battery charging.

11. Not Connected

There is no circuit connected to this pin.

12. Not Connected

There is no circuit connected to this pin.

12 Pin Trailer Plug Functionality Table

Pin	Name	Function	Maximum Current Load on Pin	Maximum Globes / Components Connected to Circuit
1	Left Indicator	Left indicator signal	3.5 amp	2 x 21 watt globe
2	Reverse	Reverse lamp signal	3.5 amp	2 x 21 watt globe
3	Ground	Ground - light duty for lights	15 amp (ground return)	–
4	Right Indicator	Right indicator signal	3.5 amp	2 x 21 watt globe
5	Electric Brake	Electric brake control signal	–	4 x electric brake hubs
6	Brake Lamp	Brake lamp signal	3.5 amp	2 x 21 watt globe
7	Park Lamp	Brake lamp signal	6.5 amp	16 x 5 watt globe
8	Battery +	Battery positive - Medium duty for fridge	20 amp	–
9	–	–	–	–
10	Ground	Ground - Medium duty for fridge	20 amp (ground return)	–
11	–	–	–	–
12	–	–	–	–

Wheels and Tyres

Tyre Changing

⚠ Warning


The jack should be used on level firm ground wherever possible.

It is recommended the wheels of the vehicle be chocked, and that no person should remain in a vehicle that is being jacked

No person should place any part of their body under a vehicle that is supported by a jack.


See "Tyre Changing" ⇨ *OM Vehicle Care*.

Tyre Placard

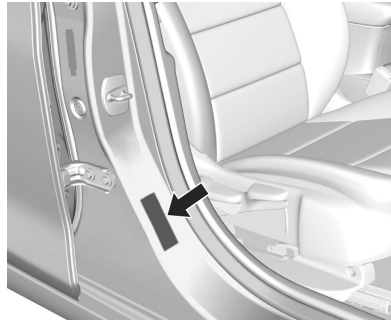


Correct tyre pressures are shown on the tyre placard located on the driver's door frame. Also see *Tyre Pressure* ⇨ 47.

Engine Drive Belt Routing

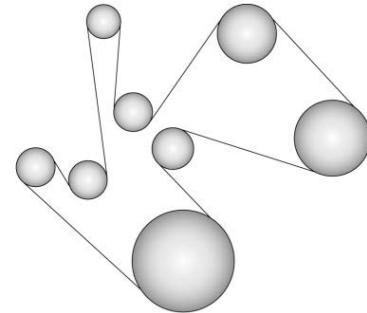

6.6L Engine

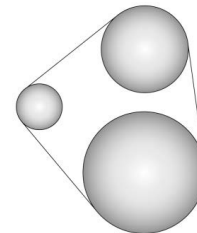

Auxiliary Drive

Technical Data

Vehicle Identification..... 41

Vehicle Identification Number (VIN)	41
Engine Identification	41
Security Vehicle Identifier Label	42
Built Plate	42

Vehicle Data 43

Engine Data	43
Recommended Fluids and Lubricants.....	43
Capacities and Specifications	44

Vehicle Weights and Dimensions 45

Trailer Towing	45
Vehicle Weights.....	46
Vehicle Dimensions.....	47
Ground Clearance	47


Tyre Pressure..... 47

Vehicle Identification

Vehicle Identification Number (VIN)




The Vehicle Identification Number (VIN) is embossed on the instrument panel, visible through the left-hand side of the windscreen.

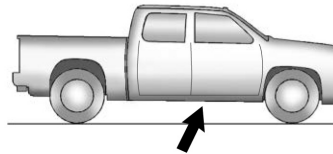

The VIN is also stamped on the underside of the chassis, below the driver's door.

It is also included on the Security Vehicle Identifier label.

Engine Identification

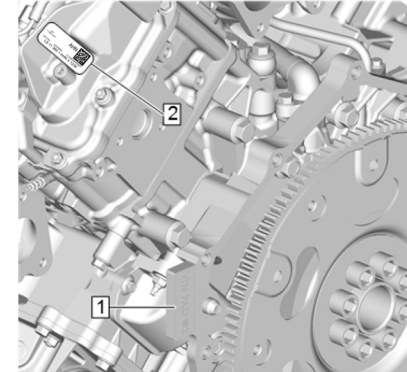


The engine serial number is stamped into the engine block on the left rear of the engine (1).


To aid identification, an engine traceability label (2) is affixed to the rear of the left-hand cylinder head.

The engine number is also included in the build plate.

Security Vehicle Identifier Label

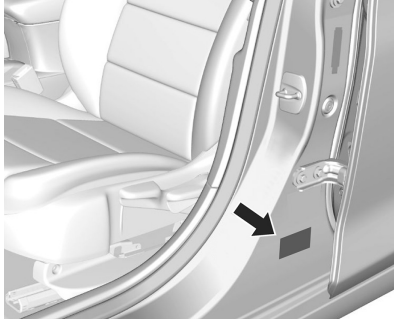

If equipped, the security vehicle identifier (SVI) label is located on the front passenger's door frame.

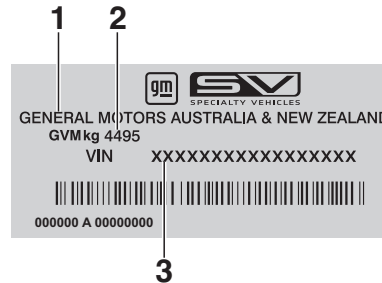


Example only

Information on the SVI label:

1. Manufacturer
2. GVM*:
 - NB1 = 4495 kg
 - NB2 = 5148 kg
3. Vehicle Identification Number (VIN)

*: For further information see *Vehicle Weights* ⇨ 46.

Built Plate

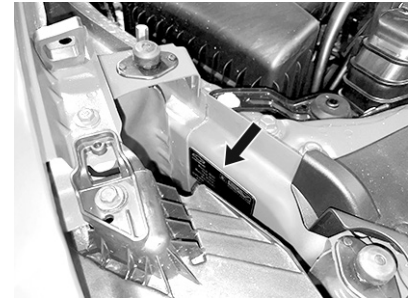

A built plate is located in the engine compartment behind the right-hand headlight.

Information on the built plate:

- Build No.
- Tag No.
- Built date
- Colour
- Option code
- Engine No.

Vehicle Data

Engine Data

Engine type	6.6L V8 Diesel (L5P)
Engine capacity	6600 cc
Engine power and torque	Refer to gmspecialtyvehicles.com
Fuel type*	Diesel

*: For further information see *Fuel* ⇨ 29.

Recommended Fluids and Lubricants

Engine oil	15W-40 ACDelco Select Fleet Low SAPS HD Diesel Oil
Diesel Exhaust Fluid (DEF)	GM approved DEF, API or ISO 22241 certified
Coolant	50% clean fresh water and 50% DEX-COOL®
Automatic transmission fluid	Dexron® ULV ACDelco Part No. 19420403
Transfer case oil	Dexron® VI automatic transmission fluid
Differential oil – front	75W-85 Synthetic hypoid gear oil ACDelco Part No. 19420402
Differential oil – rear	75W-90 Synthetic hypoid gear oil ACDelco Part No. 19375077
Power steering fluid	Shell power steering fluid meeting GM specification 9985010
Brake fluid	Dot 4 brake fluid conforming to GMW3356

44 Technical Data

Capacities and Specifications

Engine	6.6L V8 Diesel (L5P)
Engine Oil (Refill incl. filter)	9.5 Litres
Coolant – Engine	28.5 Litres
Coolant – Low temperature cooling circuit	1.9 Litres
Automatic Transmission	13.6 Litres (service fill)
Transfer Case Fluid	2.3 Litres
Differential – Front	1.8 Litres
Differential – Rear	3.0 Litres
Power Steering Fluid	2.0 Litres
Fuel Tank	136.0 Litres
Diesel Exhaust Fluid (AdBlue)	26.5 Litres
Wheel Nut Torque	190 Nm

All capacities are approximate.

Vehicle Weights and Dimensions

Overloading is a safety hazard and could also shorten the life of the vehicle.

All figures are correct at time of publishing.

Trailer Towing

Maximum Unbraked Trailer Towing Capacity

	Maximum Trailer Weight	Maximum Tow Ball Weight
50 mm towbar tongue and ball	750 kg	350 kg
70 mm towbar tongue and ball	750 kg	450 kg

Maximum Braked Trailer Towing Capacity

	Maximum Trailer Weight	Maximum Tow Ball Weight
50 mm towbar tongue and ball	3500 kg	350 kg
70 mm towbar tongue and ball	4500 kg	450 kg

46 Technical Data

Vehicle Weights

Category*	Kerb Mass	Payload	GVM	GCM	Maximum Axle Load
NB1	3752 kg	743 kg	4495 kg	12474 kg	Front: 2540 kg. Rear: 2994 kg
NB2	3752 kg	1396 kg	5148 kg	12474 kg	Front: 2540 kg. Rear: 2994 kg

When loading the vehicle and/or trailer ensure the vehicle's front and rear axle load limits are not exceeded.

*: Your vehicle is categorised as either NB1 or NB2.

- If it is NB1, it can be driven on a passenger car licence and the maximum NB1 loads specified apply.
- If it is NB2, regardless of the load being carried, it can only be driven by a person holding a heavy vehicle licence. Then the NB2 loads specified apply.

Refer to the SVI label affixed to your vehicle to determine its GVM and therefore its category. See *Security Vehicle Identifier Label* ⇨ 42.

Please check with you local State roads authority for further licencing information.

Vehicle Weights Explained

- Kerb mass:** The total weight of the vehicle with a full tank of fuel, but without occupants, accessories or load.
- Payload:** The maximum vehicle carrying capacity including occupants, accessories, load and tow ball mass (weight) (see *Trailer Towing* ⇨ 45).
- GVM:** Gross Vehicle Mass. The maximum allowable weight of the vehicle including all occupants, load, accessories and tow ball mass (weight) (see *Trailer Towing* ⇨ 45).
- GCM:** Gross Combined Mass. The maximum allowable weight of the vehicle plus any towed trailer (trailer, boat, caravan, etc.). GVM and towing capacity cannot be exceeded.
- Maximum axle load:** The maximum weight of each axle when fully loaded at GVM.

Vehicle Dimensions

Overall Length	Overall Width	Overall Height	Wheelbase	Track: Front	Track: Rear
6387 mm	2263 mm	2039 mm	4036 mm	1731 mm	1738 mm

The above figures are based on design dimensions.

Ground Clearance

Approach Angle	Breakover Angle	Departure Angle	Running Ground Clearance
28.5°	19°	23.6°	251 mm

The above figures are based on design dimensions at kerb weight.

Tyre Pressure

Tyre Make	Tyre Size and Profile	Recommended Pressure (Cold)					
		Front		Rear		Spare	
		kPa	PSI	kPa	PSI	kPa	PSI
Goodyear Wrangler Trailrunner	LT275/65 R20 126/123S	420	60	480	70	–	–
Michelin LTX AT/2	LT275/70 R18 125/122S	–	–	–	–	550*	80*

*: Stowage pressure

Service and Warranty

GMSV Warranty Certificate.. 50

- GMSV Warranty Application
 - Australia50
 - GMSV Warranty Application
 - New Zealand53

GMSV Warranty Repairs

Covered 54

GMSV Warranty Period 54

No Charge 54

GMSV Warranty

Exclusions..... 54

- Damage.....54
- Maintenance Items.....54
- Batteries and Bulbs55
- Misuse.....55

GMSV Warranty Questions

and Answers 55

Unauthorised Statements in Relation to GMSV

Products 58

Servicing 59

- Distance / Time based
- Service Intervals.....59

Maintenance Schedule..... 61

Service Charges 64

- Service Inclusions64
- Maintenance Repairs and
Replacements64
- Additives Not Recommended.....64

Additional Service

Charges 64

Service Coupons 65

Additional Service

Coupons 97



Congratulations on the purchase of your new Chevrolet Silverado

GMSV is dedicated to ensuring a safe and enjoyable journey for all GMSV owners.

With the convenience of a nationwide network of dealerships, all of which subscribe to globally recognised GM standards of excellence, there is always a GMSV Dealer close by.

When you service your Chevrolet Silverado at a GMSV Dealer or Authorised Service Outlet, your vehicle will be cared for by a GMSV expert with extensive model knowledge to make sure your Chevrolet Silverado is fixed right the first time, keeping you on the road.

Only GMSV Dealers and Authorised Service Outlets have access to specialist diagnostic equipment and factory training to make sure your GMSV is running as it should.

GMSV Warranty Certificate

GMSV Warranty Application – Australia

This GMSV Warranty is given by General Motors Australia and New Zealand Pty Ltd, ABN 84 006 893 232, ('GMSV').

GMSV Customer Care:
P.O. Box 1714 Melbourne, VIC 3001
1800 00 GMSV (4678)

email: gmsvcare@gm.com

The GMSV Warranty applies to the vehicle identified on the front pages of this Supplement. It is provided to the original and subsequent owners / operators of vehicles purchased and operated in Australia during the GMSV Warranty period.

This GMSV Warranty does not apply for GMSV vehicles exported or operated outside Australia.

Similarly, this GMSV Warranty is not provided for GMSV vehicles purchased overseas and imported into Australia.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to choose a refund or replacement for major failures with goods. If a failure with the goods does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time.

If this is not done, you are entitled to a refund for the goods. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods.



Just bought a new car?

Know your consumer rights

Congratulations on your new car! For any consumer, this is a major—and exciting—purchase. Take a moment to read this information so you understand what your rights are in case you have a problem later.

Under Australian law, when you buy products and services they come with automatic guarantees that they will work and do what you asked for, under what is referred to as Australia's consumer guarantee rights. If something goes wrong with your new car, you may be entitled to a remedy under the consumer guarantees as well as the manufacturer's warranty or any extended warranty you might have.

Consumer guarantees: Your automatic rights under the Australian Consumer Law that cannot be restricted or excluded.

Manufacturer and extended warranties:

Voluntary promises offered by the manufacturer, dealer or a third party that apply for a specified time and may add to your automatic rights under the Australian Consumer Law.

Manufacturers and dealers must honour your consumer guarantee rights regardless of any commercial warranties they give to you or sell you. For example, your consumer guarantee rights may protect you if your car experiences a major failure after a warranty has expired.

**Consumer guarantees**

- Your statutory rights that cannot be replaced, limited or removed by any agreement, contract or warranty, or made subject to non-disclosure conditions.
- They apply to new cars for an unspecified but reasonable time, and are subject to certain exceptions (e.g. if the reason for the damage is abnormal consumer use).

- These rights include that your new car must:
 - be of acceptable quality (including that it is safe, durable and free from defects)
 - be fit for any purpose disclosed before the sale
 - match the description provided or demo model
 - have spare parts and repair facilities available.
- These rights apply regardless of whether or not an independent operator services or repairs your car.

**Manufacturer's warranty**

- This is a car manufacturer's promise about your new car and what they will do if something goes wrong.
- It applies for a specified time from when you buy a new car.
- It comes with conditions that limit the coverage and what you can claim for.

- It typically allows you to choose your preferred repairer for service and repair, as long as the manufacturer's maintenance and servicing standards are met.
- However some manufacturer warranties may require you to return to their dealer network for repairs claimed under warranties.

**Extended warranty**

- You may be able to purchase an optional add-on extended warranty that is usually sold separately to the car.
- It applies for a specified time once the manufacturer's warranty expires.
- You may be able to purchase a manufacturer's extended warranty, which usually replicates and extends your existing warranty, or you may be able to purchase a dealer or third-party extended warranty.
- You should make sure that the extended warranty provides value for money and benefits greater than what

52 Service and Warranty

you automatically receive under the consumer guarantees. For example, some extended warranties contain restrictive terms and conditions, such as excluding certain parts, setting caps on claims or requiring you to use a nominated repairer.

If your new car fails to meet the consumer guarantees

If your car fails to meet a consumer guarantee, you have rights against whoever supplied you the car (e.g. the car dealer), and in some cases against the manufacturer. In particular, you are entitled to a repair, replacement or refund if your new car fails to meet the consumer guarantees.

The remedy you're entitled to, and who chooses the remedy, will depend on whether the failure is **major** or **minor**.



Major failures

This type of failure happens when:

- your car cannot be fixed or it is too difficult to fix your car within a reasonable time (e.g. your car develops excessive jerking due to a manufacturing defect that cannot be repaired, or is too difficult to repair within a reasonable time)
- if, as a reasonable consumer who was fully aware of the nature and extent of the failure, you would not have bought the car (e.g. your car suddenly and unexpectedly loses power due to a manufacturing defect)
- the failure prevents you from using your car and it cannot be fixed in a reasonable time (e.g. your car is not drivable due to a manufacturing defect and is incapable of being repaired in a reasonable time)
- the failure creates an unsafe situation (e.g. your car has a fault that affects your ability to brake or steer the car easily).

Type of remedy

You can 'reject the car' (which typically requires you to return it) and choose between a repair, replacement or refund.

You should clearly advise the supplier that sold you the car (e.g. the car dealer) if you intend to reject it, and explain why – e.g. the car is not drivable, or the car was not repaired within a reasonable time, etc.

You may also be able to recover 'reasonably foreseeable' damages for any loss or damage you suffered from the supplier that sold you the car (e.g. the car dealer), or in some cases from the manufacturer.



Minor failures

This type of failure happens when:

- your new car can be fixed, or the problem can be resolved, within a reasonable time (e.g. your car's engine develops a slight rattling noise that doesn't interfere with its ordinary operation, and can be successfully repaired within a reasonable time).

Type of remedy

The supplier that sold you the car (e.g. the car dealer) can choose to repair or replace your new car, or to offer you a refund.

Any repairs must be done within a reasonable time and without charge.

However, you may choose the remedy if the repair is not done in a reasonable time.

In this case, you may request a free replacement or a refund. You may also seek a repair elsewhere and be able to recover the costs, as well as any 'reasonably foreseeable' loss or damage you suffered as a result of the failure, from the supplier that sold you the car (e.g. the car dealer), or in some cases from the manufacturer.

More information

For more information on your consumer rights visit:

www.accc.gov.au/consumerguarantees

© Australian Competition and Consumer Commission
2018 under a Creative Commons Attribution 3.0 Australia
licence. ACCC 08/18_1387 www.accc.gov.au

**GMSV Warranty
Application – New Zealand**

This GMSV Warranty is given by General Motors New Zealand Limited, (NZ Business Number 9429040971896), ('GMSV') of 2/118 Savill Drive, Mangere East, 2024, Auckland, New Zealand.

GMSV Customer Care:
0800 GMSV00 (467800)

email: gmsvcare@gm.com

The GMSV Warranty applies to the vehicle identified on the front pages of this Supplement. It is provided to the original and subsequent owners / operators of vehicles purchased and operated in New Zealand during the GMSV Warranty period.

This GMSV Warranty does not apply for GMSV vehicles exported and operated outside New Zealand. Similarly, this GMSV Warranty is not provided for GMSV vehicles purchased overseas and imported into New Zealand.

The benefits conferred by this GMSV Warranty are in addition to other rights and remedies available to you under consumer protection laws (including those under the Consumer Guarantees Act 1993), which cannot be excluded or limited (referred to as Statutory Rights). This GMSV Warranty in no way limits or restricts your rights or remedies under such Statutory Rights.

GMSV Warranty Repairs Covered

Subject to your non-excludable statutory rights and the exclusions shown on the following pages, this GMSV Warranty covers the correction of any manufacturing defect to materials or GMSV workmanship and advised to a GMSV Dealer or Authorised Service Outlet, by repair or at GMSV's option by replacement.

GMSV Warranty Period

The coverage under this GMSV Warranty commences from the date of first registration (or in the case of a demonstrator vehicle the date when the vehicle was first placed into service by the Dealer). This coverage expires at the end of the period of 3 years after the commencement date or after the vehicle has travelled 100,000 kilometres, whichever occurs first.

No Charge

Warranty work performed under this GMSV Warranty (including parts and labour) will be carried out at no cost to the vehicle owner. However, this work should not be confused with servicing specified in the maintenance schedule in this Supplement for which a charge is payable.

GMSV Warranty Exclusions

Damage

Your GMSV Warranty does not extend to the following:

- damage caused by an accident, fire, theft or moving objects striking the vehicle (including inside the vehicle)
- damage as a result of towing
- damage caused by industrial fallout, chemicals or sealants
- damage caused by atmospheric fallout or flood, hail, salt, etc.

Maintenance Items

Your GMSV Warranty does not extend to services such as brake adjustment, brake replacement, replacement of filters, wiper rubbers, etc., which are required as part of normal vehicle maintenance. Refer to Maintenance Schedule in this Supplement.

Batteries and Bulbs

Under this GMSV Warranty, batteries are warranted for 3 years / 100,000 km. Bulbs are warranted for 1 year regardless of km.

Misuse

This GMSV Warranty does not cover damage caused by:

- (a) misuse or abuse of the vehicle such as by racing, rallying, overloading, etc. or neglect,
- (b) operation of the vehicle after the defect is known,
- (c) failure to carry out scheduled maintenance services. Refer to Maintenance Schedule in this Supplement,
- (d) use of incorrect types and grades of fuel, oil or lubricants,
- (e) alteration or modifications of the vehicle by anyone not authorised by GMSV,
- (f) fitting of parts or accessories not recommended by GMSV,

- (g) any work carried out on the vehicle by anyone except an Authorised GMSV Dealer or Authorised Service Outlet.

GMSV Warranty Questions and Answers

This section is designed to assist you to understand the GMSV Warranty provided with your new vehicle which is in addition to your statutory rights which cannot be excluded, limited or restricted by this GMSV Warranty.

Q 1. *How do I go about obtaining GMSV Warranty service?*

It is the responsibility of the selling Dealer to provide GMSV Warranty service, therefore, you should take your vehicle to the selling Dealer whenever GMSV Warranty service is needed. However, if this is not possible, you may go to any other Authorised GMSV Dealer. The details recorded in the front of this Supplement will be required by the Dealer.

Q 2. *What should I do if my vehicle becomes unsafe or inoperative as a result of a defect which is covered by the GMSV Warranty?*

You should contact the nearest Authorised GMSV Dealer or GMSV Roadside Assistance as soon as possible, and arrange for that Dealer to carry out the required GMSV Warranty service.

Q 3. *What should I do if, in an emergency, GMSV Warranty service is required and an Authorised GMSV Dealer is not available to provide such service at the time?*

Subject to your statutory rights, if, in an emergency, a repair, replacement or adjustment (covered by the GMSV Warranty) is required to enable your vehicle to be operated safely and it is not practical for you to go to an

Authorised GMSV Dealer, the service (to the extent that it is necessary to enable your vehicle to be operated safely) may be performed by any other qualified mechanic or repairer.

A claim for the reasonable cost may be made under the GMSV Warranty through the Authorised GMSV Dealer who would normally provide you with GMSV Warranty service.

You must also take your vehicle to the Authorised GMSV Dealer for inspection of the service and / or completion of any required GMSV Warranty service, as soon as possible.

Note:

During normal business hours, you should seek authorisation from your nearest Authorised GMSV Dealer or GMSV Customer Care, prior to repairs under your GMSV Warranty being commenced.

Q 4. *Is damage or injury, loss of time, inconvenience, commercial or other direct or indirect loss covered by the GMSV Warranty?*

No, these items are not covered under the GMSV Warranty. GMSV Warranty only covers the repair, replacement or adjustment of those parts of your vehicle which are found to be defective in materials or workmanship. No other types of claim for compensation of any kind, even if the same resulted from a consequence of a defect in materials or workmanship in your vehicle, will be recognised under the GMSV Warranty.

You may also have rights under your non-excludable statutory rights to claim compensation or other remedies outside of the GMSV Warranty.

Q 5. Will I have to pay for maintenance costs during the GMSV Warranty Period?

Maintenance costs are not covered by the GMSV Warranty. The maintenance schedules in this Supplement specify the minimum maintenance required for your vehicle operating under normal conditions.

Subject to your statutory rights, the Maintenance items (except where they are required as a result of defects in materials or workmanship) for which you will have to pay include:

- Engine tune-up
- Replacement of engine and other belts, hoses (including LPG hoses), wiper blades and clutch linings
- Cleaning or flushing of fuel, coolant, brake, engine,

transmission, power steering, etc. – after 3,000 km

- Carbon and sludge removal
- Maintenance servicing of emission control system devices
- Adding to (or replacing) lubricants
- Adding to (or replacing) air conditioning refrigerant – after 3,000 km
- Any necessary adjustments to drive belts, transmission, clutch, etc.
- Wheel balancing – after 3,000 km
- Wheel alignment
- De-dusting or de-glazing of brake linings or pads – after 3,000 km
- Brake pad / lining wear or damaged brake components due to brake / pad lining wear

- Clutch lining wear or damaged clutch components due to lining wear
- Brake disc pad or disc wear.
- Battery recharging
- Paint, bright metal finish and trim, due to normal deterioration
- Body panel adjustment – after 3,000 km
- Door, or bonnet lock adjustments
- Glass or channel adjustments – after 3,000 km
- Body rattles and squeaks – after 3,000 km
- Chipped glass or breakage
- Torn or damaged floor mats or carpets
- Normal wear and tear to trim components

Q 6. *Will I have to pay for any costs or expenses in connection with the provision of GMSV Warranty service?*

All parts and labour used in carrying out GMSV Warranty service at the premises of the servicing GMSV Dealer, are free of charge. Whenever GMSV Warranty service is to be carried out by the servicing GMSV Dealer it is your responsibility to deliver your vehicle to the servicing GMSV Dealer's premises.

If, as a result of a defect which is covered by the GMSV Warranty, your vehicle cannot be driven safely and you arrange for the nearest Authorised GMSV Dealer to carry out the required GMSV Warranty service, GMSV will accept reasonable towing costs to move your vehicle to the nearest GMSV Dealer's premises.

Before employing a towing company, contact the nearest GMSV Dealer or GMSV Roadside Assistance Service or GMSV Customer Care to obtain guidance.

Q 7. *Would my vehicle's engine benefit from fuel additives, oil additives or coolant additives not marketed by GMSV?*

Your GMSV is engineered to perform at its optimum using GMSV recommended lubricants and fluids. The use of Supplemental additives is not recommended as their use not only increases operating costs, but may indeed be harmful to your vehicle.

Any negative impact or consequences due to the use of additives may affect the validity of your GMSV Warranty. Only the fluids and lubricants referred to in this Supplement should be used.

Unauthorised Statements in Relation to GMSV Products

No GMSV Dealer or other person is authorised or permitted to give or make any statement, assertion or undertaking in relation to the quality, performance, characteristics, descriptions or fitness for any purpose of any GMSV product or in connection with the supply of any GMSV product, which is at variance with any written statement, assertion or undertaking on any of these subjects given or made by GMSV in its published sales literature, and GMSV does not accept any responsibility for such unauthorised action.

Servicing

Distance / Time based Service Intervals

The complimentary inspection is due at 1 month of owning your new GMSV vehicle.

The first scheduled maintenance service is due at 1 year or 12,000 km (whichever occurs first) from taking delivery of your vehicle and thereafter, every 1 year or 12,000 km (whichever occurs first).

Additional services are required under certain driving conditions, such as when towing.

Complimentary Inspection

The 1 month complimentary inspection is performed free of charge by the selling Dealer.

A different GMSV Dealer may perform this inspection if provided with authorisation from the selling Dealer.

Determining the Correct Service Interval

The operating conditions of your vehicle will determine the service interval. Use the time interval or the odometer reading, whichever occurs first, to determine when the service is due. It is important to remember that oils and fluids in your vehicle will deteriorate over time, therefore if your vehicle has not travelled the specified service interval distance, the vehicle must be serviced by time interval.

Under certain operating conditions, your GMSV may require additional servicing to ensure maximum safety, performance and longevity.

The additional service requirements typically include more frequent replacement of lubricating oils for example, engine and transmission fluids and the more frequent inspection of steering, suspension and brake system components.

For more information refer to Maintenance Schedule in this Supplement.

Your GMSV Dealer will be able to determine the appropriate service requirements for your vehicle according to your operating conditions.

Engine Oil Life System

If Change Engine Oil Soon appears in the Driver Information Centre (DIC), the engine oil and filter must be replaced within 1,000 km and the Engine Oil Life System (EOLS) reset. The engine oil and filter change should be recorded on an Additional service coupon.

Note:

If Change Engine Oil Soon appears in the DIC within 3,000 km of the next scheduled maintenance interval, the scheduled service should be performed, the engine oil and filter changed, and the EOLS reset. Record on the applicable coupon stub.

Service Coupons

Service coupons are provided further on in this Supplement. When each service is performed, the appropriate coupon is removed. This reveals the next coupon to remind you when the next service is due.

After each service, check the service has been validated by the Service Provider and, where applicable, the Dealer's stamp and signature is on the coupon stub. This is important as it not only assists in the determination of GMSV Warranty claims, but enhances the value of the vehicle when selling.

Additional Service Requirements

If you are driving your vehicle outside of the normal driving conditions, you may need to conduct additional servicing. Criteria for these additional services can be found in the maintenance schedule. Additional service coupons can be found further on in this Supplement.

As a guide, if you operate your vehicle continually for a period of one month or 1,000 km under any of the conditions listed, then additional services are recommended. If you consider that further servicing may be required, consult your Dealer.

Your GMSV Dealer

When it comes to service, remember that your GMSV Dealer has the trained personnel and specialised equipment to correctly service your vehicle. Your GMSV Dealer invites you to return for all your service needs both during and after the GMSV Warranty period.

The safety, economy, emission control, performance and reliability of your vehicle cannot be assured unless regular maintenance is performed, preferably by factory-trained technicians at GMSV Dealers.

GMSV Warranty and Service

Subject to your non-excludable statutory rights, all maintenance

services listed in this Supplement, and replacement of service items, are the responsibility of the owner and as such are NOT considered under the provisions of the GMSV Warranty to be rectified of defective material and workmanship. Items such as wheel alignment, necessary adjustments to drive belts, transmission, clutch or any other items not listed in the maintenance schedule which may require servicing due to fair wear and tear are carried out at the owner's cost.

Damage caused by failure to have proper maintenance services carried out in accordance with GMSV's specifications may impact your GMSV Warranty.

As a result, it is strongly recommended that such services be carried out by an authorised GMSV Dealer or Authorised Service Outlet and that you read the GMSV Warranty section previously in this Supplement, so that you are aware of the GMSV Warranty exclusions.

Maintenance Schedule

Years or x1000 km (whichever occurs first)

Years	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Km	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180
Under bonnet															
Engine oil *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Engine oil filter *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Reset engine oil life system	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Drive belts										○	○	○	○	○	
Cooling systems	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Engine coolant *2					●					●					●
Low temperature cooling circuit coolant *2					●					●					●
Brake fluid *3	○	○	○	●	○	○	○	●	○	○	○	●	○	○	○
Power brake unit and hoses	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Engine air filter *4, *5	○	○	○	●	○	○	○	●	○	○	○	●	○	○	○
Reset engine air filter life system	Perform whenever engine air filter is replaced														
Batteries and terminals	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Under vehicle															
Brake lines, hoses and connections	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Front and rear disc brakes *6	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Fuel lines and hoses	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Drain fuel filter	○		○		○		○		○		○		○		○
Fuel filter *7, *8		●		●		●		●		●		●		●	
Reset fuel filter life system	Perform whenever fuel filter is replaced														
Power steering operation and steering linkages	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Automatic transmission fluid and filter *9												●			
Differential oil	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Transfer case fluid *10	○	○	○	○	○	●	○	○	○	○	○	●	○	○	○

[illegible]

- Replace
 - ▲ Tighten
 - Inspect: Inspect and adjust, rotate, drain, lubricate, reset or clean as required. If repair or replacement is necessary, additional charges may apply.
- *1 If a Change Engine Oil Soon message is displayed, change the engine oil and oil filter within the next 1,000 km. Reset the engine oil life system in the DIC.
- *2 Replace engine and low temperature cooling circuit coolant at 5 years or 240,000 km whichever occurs first.
- *3 Caravan or trailer towing, replace brake fluid every 1 year.
- *4 If a Replace Engine Air Filter message is displayed, replace the engine air filter as instructed. Reset the Engine Air Filter Life system in the DIC.
- *5 Includes cleaning the bonnet intake duct.
- *6 If a Replace Brake Pad message is displayed, replace the brake pads as instructed. Always replace brake pads as a complete axle set. Reset the brake pad life system in the DIC.
- *7 Replace the fuel filter at 2 years or 36,000 km whichever occurs first.
- *8 If a Change Fuel Filter message is displayed, replace the fuel filter as instructed. Reset the Fuel Filter Life system in the DIC.
- *9 If the vehicle is operated under any of the following conditions, change the automatic transmission fluid and filter every 72,000 km.
- A Extended periods of idling or low speed operation.
 - B Extended heavy load, high speed operation in outside temperatures above 35°C.
 - C Driving for long period in cold temperatures or driving regularly for short distances only.
 - D Caravan or trailer towing.
- *10 If the vehicle is operated in very dusty or sandy, muddy or wet areas, replace the transfer case fluid every 36,000 km.
- *11 Your GMSV Dealer will assess the wear on your tyres and rotate depending upon their specification and current serviceability.
- *12 If fitted, check the bullbar and towbar attaching bolts are tightened to the correct specification and inspect the chassis frame end plates and associated welds.
- *13 If the vehicle is operated in very dusty or sandy areas, inspect the passenger compartment air filter (pollen filter) every year. Replace as required.
- *14 Lubricate the vertical side door window channel weatherstrips using GM silicone spray or equivalent. Operate the window several times to ensure smooth operation.

Service Charges

Service Inclusions

Regular servicing includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Maintenance Repairs and Replacements

The owner is charged for the repair or replacement of any part found unserviceable during a service inspection and not covered by Warranty.

Where any deficiencies are noted, such items should be reported to the owner / operator and the additional work quoted and authorised.

Additives Not Recommended

Your GMSV is engineered to perform at its optimum using GMSV recommended lubricants and fluids. The use of supplemental additives is not recommended as their use not only increases operating costs, but may indeed be harmful to your vehicle.

Additional Service Charges

If any additional service or maintenance work is required, the authorised GMSV dealer will discuss any additional costs with the customer prior to performing any such additional work.

- Engine oil and filter.... add 0.5 hour
- Engine coolant add 1.0 hour
- Low temperature cooling circuit coolant add 1.0 hour
- Engine air filter add 0.3 hour
- Fuel filter add 0.3 hour
- Automatic transmission fluid and filter..... add 0.7 hour
- Transfer case fluid.... add 0.3 hour
- Brake fluid add 1.0 hour
- Tyres are rotated add 0.2 hour
- Tyres are rotated and balanced add 0.7 hour
- Passenger compartment air filter (pollen filter).. add 0.2 hour

This vehicle has been thoroughly checked in accordance with the complimentary service.

GMSV DEALER STAMP
(if Applicable)

Dealer

Service Manager's signature

Date of service Odometer

COMPLIMENTARY INSPECTION COUPON

At 1 month

This coupon should not be removed until the vehicle is presented for service.

Owner's name

Mr Mrs Miss Other

.....

Address

Town

State

Postcode

Registration

Engine No

ISOVIN

Model

Selling Dealer's stamp and signature

Date of acquisition

This vehicle has been thoroughly checked in accordance with the schedule on the reverse side of this coupon.

Servicing Dealer's stamp and signature

Servicing Dealer

Town

State

Owner's signature

This inspection is provided free of charge.

Under bonnet

Inspect:

- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Batteries and terminals

Under vehicle

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

Service validation
1 year or 12,000 kms
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 1 year / 12,000 km service.

GMSV DEALER STAMP
(If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

Service time: 1.2 hours

1 year or 12,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Rotate:

- ☐ Wheels

Drain:

- ☐ Fuel filter

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Continued...

Reset:

- ☐ **2: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet & door strikers and door hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 2 year / 24,000 km service.

GMSV DEALER STAMP
 (If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

2 years or 24,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 1.6 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Replace:

- ☐ Fuel filter

Rotate:

- ☐ Wheels

Tighten:

- ☐ Check and tighten bolts and nuts on chassis and body

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots

Continued...

70 Service and Warranty

- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Reset:

- ☐ Fuel filter life system
- ☐ *: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet & door strikers and door hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

Service validation
3 years or 36,000 kms
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 3 year / 36,000 km service.

GMSV DEALER STAMP
(If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

3 years or 36,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 1.4 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Rotate:

- ☐ Wheels

Drain:

- ☐ Fuel filter

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Continued...

72 Service and Warranty

Reset:

- ☐ *2: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Replace:

- ☐ Passenger compartment air filter (pollen filter)

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

Service validation
4 years or 48,000 kms
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 4 year / 48,000 km service.

GMSV DEALER STAMP
(If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

Service and Warranty 73

SERVICE COUPON

Service time: 2.9 hours

4 years or 48,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter
- ☐ Brake fluid
- ☐ Engine air filter

Inspect:

- ☐ Cooling systems
- ☐ Power brake unit and hoses
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ Engine air filter life system

Under vehicle

Replace:

- ☐ Fuel filter

Rotate:

- ☐ Wheels

Tighten:

- ☐ Check and tighten bolts and nuts on chassis and body

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*2
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)

Continued...

74 Service and Warranty

- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Reset:

- ☐ Fuel filter life system
- ☐ *: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

Service validation
5 years or 60,000 kms
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 5 year / 60,000 km service.

GMSV DEALER STAMP
(If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

Service and Warranty 75

SERVICE COUPON

Service time: 3.2 hours

5 years or 60,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter
- ☐ Engine coolant
- ☐ Low temperature cooling circuit coolant

Inspect:

- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Rotate:

- ☐ Wheels

Drain:

- ☐ Fuel filter

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Continued...

Reset:

- ☐ *2: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

Service validation
6 years or 72,000 kms
(whichever occurs first)

This vehicle has been thoroughly checked in accordance with the 6 year / 72,000 km service.

GMSV DEALER STAMP
(If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

6 years or 72,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 2.1 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Replace:

- ☐ Fuel filter
- ☐ Transfer case fluid

Rotate:

- ☐ Wheels

Tighten:

- ☐ Check and tighten bolts and nuts on chassis and body

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)

Continued...

78 Service and Warranty

- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Reset:

- ☐ Fuel filter life system
- ☐ *: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Replace:

- ☐ Passenger compartment air filter (pollen filter)

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC

- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 7 year / 84,000 km service.

GMSV DEALER STAMP
(If Applicable)

Service Provider

Date of service

Odometer

Additional items performed

Signed

SERVICE COUPON

7 years or 84,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Rotate:

- ☐ Wheels

Drain:

- ☐ Fuel filter

Tighten:

- ☐ Check and tighten bullbar and towbar attaching bolts and inspect chassis

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)

Continued...

80 Service and Warranty

- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Reset:

- ☐ *: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 8 year / 96,000 km service.

GMSV DEALER STAMP
 (If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

8 years or 96,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 2.9 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter
- ☐ Brake fluid
- ☐ Engine air filter

Inspect:

- ☐ Cooling systems
- ☐ Power brake unit and hoses
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ Engine air filter life system

Under vehicle

Replace:

- ☐ Fuel filter

Rotate:

- ☐ Wheels

Tighten:

- ☐ Check and tighten bolts and nuts on chassis and body

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*2
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)

Continued...

82 Service and Warranty

- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Reset:

- ☐ Fuel filter life system
- ☐ *: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 9 year / 108,000 km service.

GMSV DEALER STAMP
 (If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

9 years or 108,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 1.5 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Rotate:

- ☐ Wheels

Drain:

- ☐ Fuel filter

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Continued...

84 Service and Warranty

Reset:

- ☐ **2: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Replace:

- ☐ Passenger compartment air filter (pollen filter)

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 10 year / 120,000 km service.

GMSV DEALER STAMP
(If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

10 years or 120,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter
- ☐ Engine coolant
- ☐ Low temperature cooling circuit coolant

Inspect:

- ☐ Drive belts
- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*1
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *1: If engine air filter is replaced, reset engine air filter life system

Service time: 3.7 hours

Under vehicle

Replace:

- ☐ Fuel filter

Rotate:

- ☐ Wheels

Tighten:

- ☐ Check and tighten bolts and nuts on chassis and body

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*2
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)

Continued...

- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Reset:

- ☐ Fuel filter life system
- ☐ *: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 11 year / 132,000 km service.

GMSV DEALER STAMP
 (If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

11 years or 132,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 1.3 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Drive belts
- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Rotate:

- ☐ Wheels

Drain:

- ☐ Fuel filter

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Continued...

Reset:

- ☐ *2: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 12 year / 144,000 km service.

GMSV DEALER STAMP
 (If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

12 years or 144,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 4.2 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter
- ☐ Brake fluid
- ☐ Engine air filter

Inspect:

- ☐ Drive belts
- ☐ Cooling systems
- ☐ Power brake unit and hoses
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ Engine air filter life system

Under vehicle

Replace:

- ☐ Fuel filter
- ☐ Automatic transmission fluid and filter
- ☐ Transfer case fluid

Rotate:

- ☐ Wheels

Tighten:

- ☐ Check and tighten bolts and nuts on chassis and body

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*2
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots

Continued...

- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Reset:

- ☐ Fuel filter life system
- ☐ *: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Replace:

- ☐ Passenger compartment air filter (pollen filter)

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC

- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 13 year / 156,000 km service.

GMSV DEALER STAMP
 (If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

13 years or 156,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 1.3 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Drive belts
- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*¹
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *¹: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Rotate:

- ☐ Wheels

Drain:

- ☐ Fuel filter

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*²
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Continued...

Reset:

- ☐ *2: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 14 year / 168,000 km service.

GMSV DEALER STAMP
 (If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

14 years or 168,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 1.7 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter

Inspect:

- ☐ Drive belts
- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*1
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *1: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Replace:

- ☐ Fuel filter

Rotate:

- ☐ Wheels

Tighten:

- ☐ Check and tighten bolts and nuts on chassis and body
- ☐ Check and tighten bullbar and towbar attaching bolts and inspect chassis

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*2
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing

Continued...

94 Service and Warranty

- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Reset:

- ☐ Fuel filter life system
- ☐ *: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC

- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

This vehicle has been thoroughly checked in accordance with the 15 year / 180,000 km service.

GMSV DEALER STAMP
(If Applicable)

Service Provider

Date of service Odometer

Additional items performed

Signed

SERVICE COUPON

15 years or 180,000 kms

(whichever occurs first)

Includes all items listed in the standard maintenance schedule for normal operating conditions, as specified on the service coupon, including parts, labour, fluids and all applicable workshop charges.

Service time: 3.5 hours

Under bonnet

Replace:

- ☐ Engine oil
- ☐ Engine oil filter
- ☐ Engine coolant
- ☐ Low temperature cooling circuit coolant

Inspect:

- ☐ Drive belts
- ☐ Cooling systems
- ☐ Brake fluid
- ☐ Power brake unit and hoses
- ☐ Engine air filter*1
- ☐ Batteries and terminals

Reset:

- ☐ Engine oil life system
- ☐ *1: If engine air filter is replaced, reset engine air filter life system

Under vehicle

Rotate:

- ☐ Wheels

Drain:

- ☐ Fuel filter

Inspect:

- ☐ Brake lines, hoses and connections
- ☐ Front and rear disc brakes*2
- ☐ Fuel lines and hoses
- ☐ Power steering operation and steering linkages
- ☐ Differential oil
- ☐ Transfer case fluid
- ☐ Front and rear suspension
- ☐ Front wheel hub/bearing
- ☐ Driveshaft dust boots
- ☐ Tyre condition and inflation pressure (inc spare)
- ☐ Exhaust system and heat shields
- ☐ Oil pan shield

Continued...

Reset:

- ☐ **2: If brake pads are replaced, reset brake pad life system

Interior / Exterior

Replace:

- ☐ Passenger compartment air filter (pollen filter)

Lubricate:

- ☐ Bonnet, tailgate and door latches, strikers and hinges
- ☐ Side door window channel weatherstrips

Inspect:

- ☐ Park brake operation
- ☐ Horn, lights, washers and wipers
- ☐ Diesel exhaust fluid (AdBlue) level in the DIC
- ☐ Seatbelt, webbing condition, buckle operation and retractor mechanism operation
- ☐ Key transmitter range

Road test

Inspect:

- ☐ Air conditioner performance
- ☐ Cruise control operation

Check:

- ☐ Outstanding rework actions are complete

Additional Service Coupons

DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed

Additional Service Coupons

DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed

Additional Service Coupons

DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed

Additional Service Coupons

DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed
DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed	DatekmService Provider Engine oil and filter change: YES / NO EOLS reset: YES / NO Items performed

Customer Information

Customer Information 101

Roadside Assistance 101

Owner Assistance 101

Customer Information

Roadside Assistance

Your vehicle may be covered by GMSV roadside assistance.

If help is required, call:

Australia:

1800 00 GMSV (4678)

New Zealand:

0800 GMSV00 (467800)

For details of the GMSV roadside assistance refer to the Owner's section at:

www.gmspecialtyvehicles.com

Owner Assistance

At GMSV, we want you to be completely satisfied with your ownership experience. This applies to your vehicle and any GMSV representative you may deal with.

Refer below for two options for seeking assistance with your query.

GMSV Dealerships

GMSV encourages you to seek assistance from your GMSV Dealership. Each GMSV Dealership is equipped to manage any sales, servicing, parts or technical query.

If you wish to escalate a query to a higher level of staff, further options are available to you.

As a first step, GMSV suggests you discuss any concern with the relevant Department Manager, Sales Manager or Service Manager.

Alternatively, the Dealership General Manager or Dealer Principal will also be happy to assist you.

102 Customer Information

GMSV Customer Care

Should you wish to speak to a GMSV representative, you are welcome to contact GMSV Customer Care.

Refer below for operating hours and various methods of communication.

Australia

Operating Hours:

Weekdays 8am – 6pm AEST
(except National and Victorian
public holidays)

Toll Free Phone:

1800 00 GMSV (4678)

Email:

gmsvcare.au@gm.com

New Zealand

Operating Hours:

Weekdays 10am – 8pm NZST
(except National and Victorian
public holidays)

Toll Free Phone:

0800 GMSV00 (467800)

Email:

gmsvcare.nz@gm.com

Index

A

AdBlue (Diesel Exhaust Fluid).....	29
Airbag System	12
Curtain airbag system	15
Front airbag system	13
Side airbag system.....	14

B

Bulb Replacement	32
------------------------	----

C

Child Restraints	17
Child restraint systems.....	17
Top tether anchor fittings.....	21
Where to put the restraint.....	18
Customer Information	101

D

Diesel Exhaust Fluid.....	29
---------------------------	----

E

Electrical System	33
Instrument panel fuse block (left).....	34

Instrument panel fuse block (right).....	33
Trailer plug	37
Engine Compartment Overview...	31
Engine Drive Belt Routing	40

F

Fuel.....	29
Fuses.....	33

G

GMSV Warranty	50
---------------------	----

H

Headlamp Levelling	25
--------------------------	----

I

Infant and Child Restraints	17
Infotainment System.....	28
Instrument Cluster	24
Instrument Panel Overview	6

L

Lighting	26
Cargo lamps.....	27
Front fog lamps	26
Headlamp levelling.....	25

Marker lamps	26
Side turn signal lamps.....	27
Task lighting	27

M

Maintenance Schedule	61
----------------------------	----

O

Owner Assistance.....	101
-----------------------	-----

P

Power Outlets	25
---------------------	----

R

Roadside Assistance	101
---------------------------	-----

S

Seat Belts	
Force limiters.....	11
How to wear seat belts properly	9
Replacing seat belts after a crash	12
Seat belt care	12
Seat belt pretensioners	11
Seat belt use during pregnancy	11

Servicing	59
Additional service charges	64
Additional service coupons	97
Maintenance schedule	61
Service charges	64
Supplemental Restraint System (SRS)	12

T

Technical Data	41
Trailer Plug	37
Trailer Towing	29
Tyre Pressure	47

U

Using this Manual	5
-------------------------	---

V

Vehicle Care	30
Vehicle Data	43
Capacities and specifications	44
Engine data	43
Recommended fluids and lubricants	43
Vehicle Identification	41

Vehicle Weights and Dimensions	45
Ground clearance	47
Trailer towing	45
Vehicle dimensions	47
Vehicle weights	46

W

Warranty	50
----------------	----